

Additional information

Sending tone signals during communication through IP network (Basic Operation Guide: page 13)

Tone signals can be transmitted during communication through IP network. This is convenient when using a service that requires tone input during a call, such as the automatic answering service.


1 Press during communication through IP network.

The display for additional number entry appears.

2 Press #, *, or the numeric keys to enter the required number.

The corresponding tone is transmitted.



If this unit is in multiple connections, select the connection you want to send tone signals in the “Select NumberAddition” display, and press .

3 After completing the number entry, press



The display for communication reappears.

Note

While sending tone signals, this unit cannot receive any incoming calls.

The configuration saving and loading features

Due to changes in specifications, the configuration saving and loading features have been newly added. These features are useful when you want to use this unit temporarily in other locations. You can save up to 3 configurations.

■ Saving settings

Using the keys on this unit

1 In the initial display, select “Menu” → “Settings” → “Save/Load Config” → “Save Config”.

2 From the three configuration areas, select the one you want to save settings in.

Using the Web menu

1 Select “Save Config”.

2 From the three configuration areas, select the one you want to save settings in.

Note

- If you select a configuration that has already been saved, the saved configuration will be overwritten.
- The address book, the history of calls, and the configured password are not saved.

■ Loading settings

Using the keys on this unit

1 In the initial display, select “Menu” → “Settings” → “Save/Load Config” → “Load Config”.

2 From the three configuration areas, select the one you want to load settings from.

The current configuration is overwritten by the selected configuration, and this unit restarts.

Using the Web menu

1 In the Web menu, select “Load Config”.

2 From the three configuration areas, select the one you want to load settings from.

The current configuration is overwritten by the selected configuration, and this unit restarts.